

Introduction

The ShoreGear T1/E1 Voice Switch package contains:

- ShoreGear T1 / E1 Voice Switch (SG-220T1, SG-T1k, SG-220E1, or SG-E1k)
- Power cord
- Slick-on feet for surface installation
- Mounting Ears - attachable installation brackets

About The ShoreGear T1/E1 Voice Switches

Each ShoreGear T1/E1 Voice Switch connects internal extensions or IP phones to a central office (CO) digital trunk line.

The switch provides connectivity through:

- Two RJ-45 LAN connectors
- One RJ-45 Telco port for connecting the switch to a telephone company line
- One RJ-45 Monitor port for connecting test equipment
- One DB-9 (female), RS-232C maintenance port (19200 bps, 8 bits, no parity, 1 stop bit, no handshake) for serial communications
- One audio input port (3.5 mm stereo) for connecting to a music-on-hold source
- One audio output port (3.5 mm stereo) for connecting to a corporate paging system or night bell

Installation

Installation Equipment

To install the switch, you need the following equipment:

- AC surge protector for the power connection
- RJ-45 cables for connecting the switch to the local area network and telco lines
- Music-on-hold source with a standard mini-headphone Y-adaptor (optional)
- #1 Phillips screwdriver

Installation Location Requirements

To ensure optimum operating conditions for the SG-T1/E1 voice switch, verify the operating environment is adequately ventilated, free of gas or airborne particles, and isolated from electrical noise.

Installing an SG-T1/E1 Switch in a 19-inch Rack

An SG-T1/E1 switch is placed in a 19-inch rack only by mounting a ShoreGear Dual Tray into the rack, then installing the SG-T1/E1 into the Tray. You can install an SG-T1/E1 switch on the left or right side of the tray.

Refer to the *Quick Install Guide for the ShoreGear Dual Tray for Tray installation instructions and information on using the tray.*

Mounting the ShoreGear Voice Switch on a Flat Surface

If you plan to mount the switch on a flat surface, first attach the provided rubber feet to the bottom corners of the device. (You can stack up to three switches in a surface installation.)

German: Das ShoreGear Voice-Schaltgerät auf einer ebenen Oberfläche montieren

Wenn Sie planen, das Gerät auf einer ebenen Oberfläche zu montieren, befestigen Sie zunächst die mitgelieferten GummifüÙe an den unteren Ecken des Geräts. (Bei einer Oberflächeneinrichtung können Sie bis zu drei Schaltgeräte übereinander stapeln.)

Servicing Procedures

WARNING: SG-T1/E1 switches contain no internal field serviceable parts. Return the equipment to ShoreTel for any required service procedures.

CAUTION: Internal fuses should be serviced only by qualified ShoreTel personnel. If internal fuses are blown and require replacement, return the SG-T1/E1 switch to ShoreTel for service.


WARTUNGSVERFAHREN

ACHTUNG: SG-T1/E1 enthält keine internen Teile, die vor Ort gewartet werden können. Senden Sie das Gerät an ShoreTel, falls Wartungsarbeiten erforderlich sein sollten.

VORSICHT: Interne Sicherungen dürfen nur von qualifizierten ShoreTel-Mitarbeitern gewartet werden. Wenn interne Sicherungen ausgetauscht werden müssen, senden Sie den SG-T1/E1 zur Wartung an ShoreTel.

Connections

Connecting the ShoreGear Voice Switch to the Network



Once the SG-T1/E1 Voice Switch is secured to a rack or surface-mounted, you can connect it to the data network.

Use an RJ-45 Ethernet cable to connect one or both of the LAN ports to the network subnet.

While both ports can detect and respond to link status, the switch uses only one LAN port at a time.

Powering on the ShoreGear Voice Switch

After connecting the switch to the network, power on the device by connecting it to an AC power source.

1. Plug an AC surge protector (not provided) into a grounded AC power source.
2. Plug one end of the provided power cord into the receptacle on the back of the switch, then plug the other end into the AC surge protector.

The power LED flashes momentarily, and remains lit.

- If the LED is not lit, make sure the power cord is plugged into the switch and the power source.
- If the LED continues flashing, there is an internal error. Unplug the switch to power it off, then power it back on. Refer to the "Configuring Switches" chapter in the *ShoreTel Administration Guide* for information on flash patterns, or contact the ShoreTel Support Services at <http://www.shoretel.com>.

The LAN ports auto-sense the network transport rate. When the network connection is established, the network LED indicates a transport rate of 10 Mbps or 100 Mbps, and whether the switch is receiving and transmitting data.

Optional Connections

After connecting the voice switch to the LAN, you can make optional connections, including input from a music-on-hold source or output to your internal paging system.

1. Connect a music-on-hold source (CD player or other audio source) to the audio input port.
2. Connect your site's paging system to the audio output port.






Connecting a T1 or E1 Line

After setting up the network connections and configuring the SG-T1/E1 Voice Switch for operations, you can connect your T1 (SG-220T1 or SG-T1k) or E1 (SG-220E1 or SG-E1k) line to the switch.

Use an RJ-45 T1 cable to connect your T1 or E1 line to the Telco port.

For detailed information on switch port and trunk configuration, see the sections #Configuring Switches- and #Configuring Trunks in the ShoreTel Administration Guide.

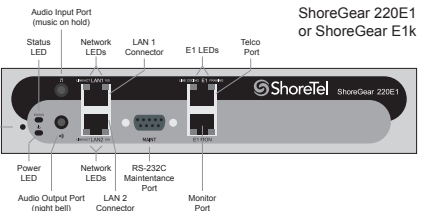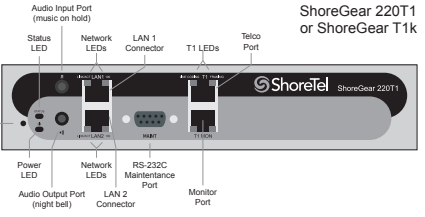

Configuration, Status, Specifications

Network and Telco Status

Network Configuration

Once the ShoreGear voice switch is installed and powered on, it must be configured for network operations. A voice switch gets a network configuration by assignment from a DHCP or BOOTP server, or directly from an administrator console (see procedure below).

For more information on setting up a switch for automatic configuration by a DHCP or BOOTP server, see the ShoreTel Planning and Installation Guide.

Configuring the Voice Switch from a Console

- Use a straight-through serial cable, DB9 male to DB9 female, to connect the switch to a console PC.
- On the PC or laptop, start a terminal emulation program and connect to the voice switch using these serial communication settings: 19200 bps, 8 data bits, no parity, one stop bit, no handshake.
- At the login prompt, enter:
Login: anonymous
Password: ShoreTel
- Choose Menu Options and follow the onscreen instructions for setting network parameters, including IP address, subnet mask, and gateway.

Power LED

The power LED indicates the operating status of the switch.

Light	Description
Steady	The switch is powered on, and the internal software is running.
Flashing	Two flashes indicates a failed internal self-test (i.e. hardware failure). Refer to "Configuring Switches" in the ShoreTel Administration Guide for details on other flash patterns.
Off	The switch is not powered on, or the software is not running.

Status LED

The status LED provides voice switch activity information.

Color	Activity	Description
Off		No ports are assigned
Green	Steady	No ports are handling active calls
Green	Flashing-Fast	At least one port is handling an active call.
Yellow	Steady	No ports are handling active calls and at least one port is out of service.
Yellow	Flashing-Slow	The switch is not connected (or has lost connection) to a ShoreTel server.
Yellow	Flashing-Fast	At least one port is handling an active call and at least one port is out of service.

Specifications

Feature	Specification
Dimensions	1.69 x 8.39 x 14.28 inches (43 x 213 x 378)
Weight	5.3 lb (2.4 kg)
Input voltage	100-240 VAC, 50-60 Hz
Power consumption	1A max.
Humidity	0-90% relative humidity (non-condensing)
Operating temperature	0-50° C

Network LEDs

Each LAN connector provides two LEDs: Link/Act (Left) and 100 (Right). LAN LEDs indicate the activity and communication speed of the connected network.

LED	Color/State	Description
Link/Act	Off	This switch cannot detect an Ethernet network.
Link/Act	Green-Steady	This switch is connected to an Ethernet network.
Link/Act	Green-Flashing	This switch detects network data traffic.
100	Off	Network interface is operating at 10 Mbps.
100	Green	Network interface is operating at 100 Mbps.

T1 LEDs (SG-220T1, SG-T1k)

T1 LEDs indicate line coding, network framing, and loopback status. The Line Coding LED is on the port's left side. The Framing LED is on the port's right side.

LED	Color/State	Description
Line coding	Green	The AMI or B8ZS line coding signal is good.
Line coding	Yellow	This switch is receiving bipolar violations (BPV) at one-second intervals.
Line coding	Red	A loss of signal (LOS) has occurred.
Line coding	Off	The switch has no power.
Framing	Green	The T1 signal is in frame (synchronized)
Framing	Yellow	The CO has sent a yellow alarm.
Framing	Yellow-Flashing	The frame-bit error rate has exceeded its limits
Framing	Red	T1 signal is out-of-frame (OOF) and cannot be framed to the Extended Superframe (ESP) or D4 format.
Framing	Off	The switch has no power.
LC/Framing	Red-Flashing	Loopback is enabled. (Loopback can be set from Shoreline Director or at the CO).

E1 LEDs (SG-220E1, SG-E1k)

E1 LEDs indicate line coding, network framing, and loopback status. The Line Coding LED is on the port's left side. The Framing LED is on the port's right side.

LED	Color/State	Description
Line coding	Green	The HDB3 line coding signal is good.
Line coding	Yellow	This switch is receiving bipolar violations (BPV) at one-second intervals.
Line coding	Red	A loss of signal (LOS) has occurred.
Line coding	Off	The switch has no power.
Framing	Green	The E1 signal is in frame (synchronized)
Framing	Yellow	The CO has sent a yellow alarm.
Framing	Yellow-Flashing	The frame-bit error rate has exceeded its limits
Framing	Red	E1 signal is out-of-frame (OOF).
Framing	Off	The switch has no power.
LC/Framing	Red-Flashing	Loopback is enabled. (Loopback can be enabled from ShoreTel Director)



ShoreGear T1 / E1 Voice Switches:

SG-220T1

SG-220E1

SG-T1k

SG-E1k

Quick Install Guide



960 Stewart Drive Sunnyvale, California 94085
Phone: +1.408.331.3300 OR +1.800.425.9385 Fax: +1.408.331.3333 www.shoretel.com

Copyright © 1998-2012 by ShoreTel Inc., Sunnyvale, California, USA. All rights reserved. Printed in the United States of America. Contents of this publication may not be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without prior written authorization of ShoreTel, Inc. ShoreTel, Inc. reserves the right to make changes without notice to the specifications and materials contained herein and shall not be responsible for any damage (including consequential) caused by reliance on the materials presented, including, but not limited to typographical, arithmetic or listing errors. ShoreTel, ShoreTel (and logo), ControlPoint, Brilliantly Simple, Brilliantly Simple Communication, ShoreCare, ShoreGear, ShorePhone, and ShoreWare are registered trademarks of ShoreTel, Inc. in the United States and/or other countries. The ShoreTel logo is a trademark of ShoreTel, Inc. in the United States and/or other countries. All other copyrights and trademarks herein are the property of their respective owners.

PN 850-1098-03